


QuickPicker

collects samples quickly and channels them directly into the sampling bottle

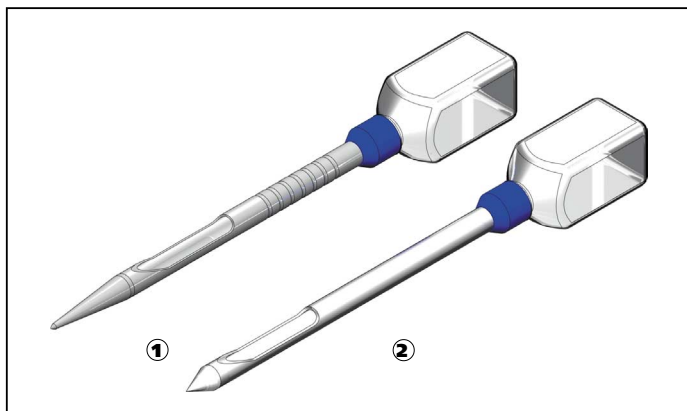

The **QuickPicker** is particularly suitable for taking direct samples of bulk goods from sacks, Big-Bags or open containers and then filling them directly into original sample bottles. It is uncomplicated to use and clean. No undercuts or edges mean no sample residues which could falsify subsequent samples.

QuickPicker is delivered complete with 2 sample bottles and cleaning brush.

- Sampling depth 30 cm, diameter 25 mm
- Made of stainless steel 316 or of transparent PP for aggressive powders
- Sample bottles made of PP or PC
- Removable point, easy to clean



1. Push the point of QuickPicker into the sack to the desired depth.



2. Pull QuickPicker out again, the sample material is drawn out in the open, half-round scoop.



3. Tilt QuickPicker backwards, now the sample falls directly into the sampling bottle.



4. Seal the punctured sack using close-it (see pages 92f).

5. Remove the sampling bottle, screw on the cap and

6. Write the sample designation on the sticker and stick it on.

Type	Material	Insertion length cm	Total length cm	Volume ml	Price/Unit	Price/Unit of (X) units	Article No.	
①	V4A (316)	30	50	75	156,00	(5) 141,00	5322-30	N4
②	PP transp.	30	50	75	98,00	(5) 88,00	5322-010	N4
Sample bottles								
	PC, glass-clear	250			6,50	(6) 6,00	0316-250	N2
	PC, glass-clear	500			10,70	(4) 9,60	0316-500	N2
	PP, transparent	250			4,63	(6) 4,21	0315-250	N2
	PP, transparent	500			5,70	(4) 5,10	0315-500	N2
	Storage sleeve				18,70	(10) 17,00	3620-60	N3
	Cleaning brush				28,20	(10) 26,70	5304-60	N4



NEW

The **QuickPicker** is now also available in polypropylene. Particularly suitable for aggressive chemicals. Transparent, scratch-proof, sterilizable, economically priced.

Any mistakes made during sampling or sampling division will inevitably lead to incorrect analytical results!

Take samples, but do it right.

You can read how this can be done on page 56.