

IceSampler

for deep-frozen products



IceSampler, developed for sampling from frozen materials and similar substances. The Ice-Sampler screws into the sample material and simultaneously extracts and conveys the sample into the sampling cylinder. The Sampling cylinder is detachable.

The Ice-Sampler is electropolished and does not have any flutes for perfect and easy cleaning.


- Sterilizable
- Electropolished
- Simple cleaning

	Length mm	Dia- meter mm	Capac- ity ml	Price/ Unit	Article No.	
IceSampler (handle, rod, sampler)						
IceSampler	300	38	50	650,00	5339-25	N2
IceSampler	550	38	50	670,00	5339-50	N2
IceSampler	1050	38	50	691,00	5339-100	N2
Extension rod	500	10		35,60	5380-56	N4
Extension rod	1000	10		41,30	5380-106	N4
Handle	100	10		41,90	5380-2	N4
Transport case for 5339-25				8,30	3600-21	N3
Transport case for 5339-50 and 5339-100				18,70	3620-60	N3



Pigment Lance

for pastes and pigments

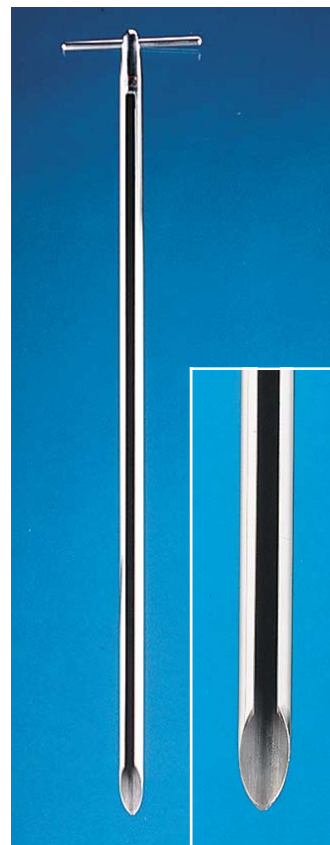

Pigment lance

with handle for pigments and pastes.

Two models are available

- With half-open flute
- With one-quarter-open flute

Operation

1. Insert the lance to the desired depth.
2. Turn handle; the sample is collected in the open flute.
3. Withdraw the lance.
4. Remove the sample.

Any mistakes made during sampling or sampling division will inevitably lead to incorrect analytical results!

Take samples, but do it right.

You can read how this can be done on page 56.



Length mm	Diameter mm	Price/ Unit	Article No.	
Pigment lance with half-open flute				
800	28	203,00	5369-7	N3
Pigment lance with one-quarter-open flute				
800	28	203,00	5369-8	N3

